



Sony Walkman NWZ-E438 Battery Replacement

Follow this guide to replace the battery

Written By: Cheryl Zinn





TOOLS:

- [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Disassembling Sony Walkman NWZ-E438




- Unscrew the 2 screws in the back of the device using the Phillips PH000 screwdriver.
- ⓘ This will be the only screwdriver you will need throughout the replacement guide(s).

Step 2




- Using a small plastic prying tool, carefully pry off the back of the device.

Step 3 — Battery

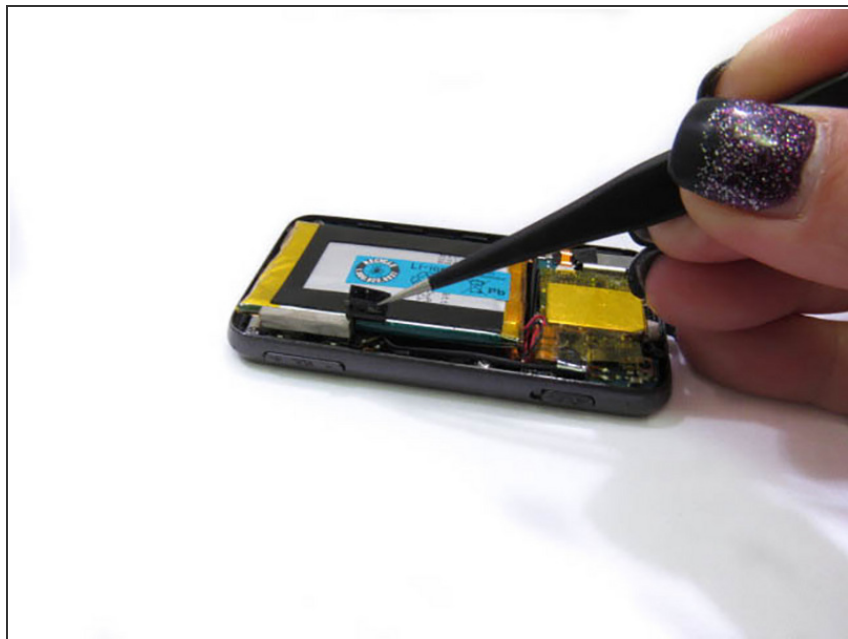


- Peel back the black tape from the device to the battery from the side of the device.


Step 4

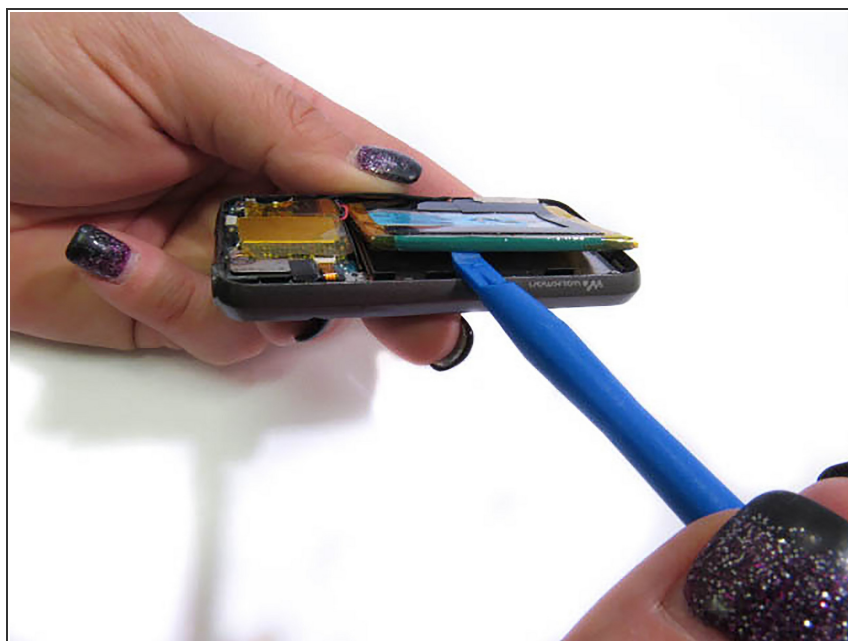

- Using a small, plastic prying tool slowly lift the battery around all edges.


 Careful of wires connecting the battery to the device.

Step 5

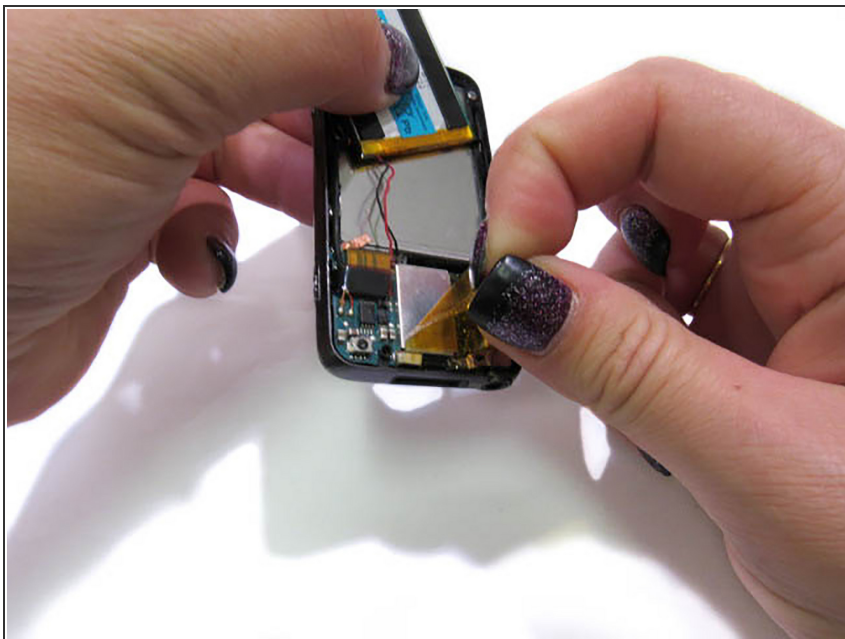


- Remove the yellow film covering the circuit board with pointed precision tweezers.

Step 6

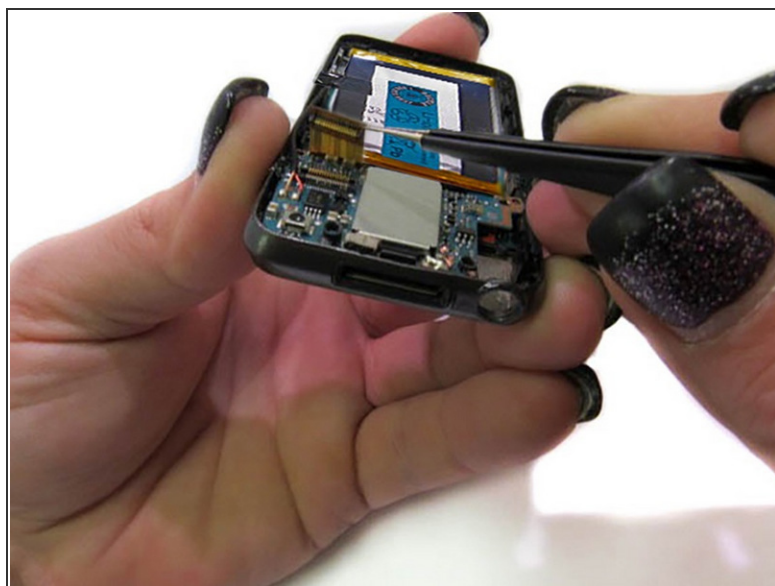

- Using tweezers, unplug the gold band connecting the device and circuit board.

Step 7

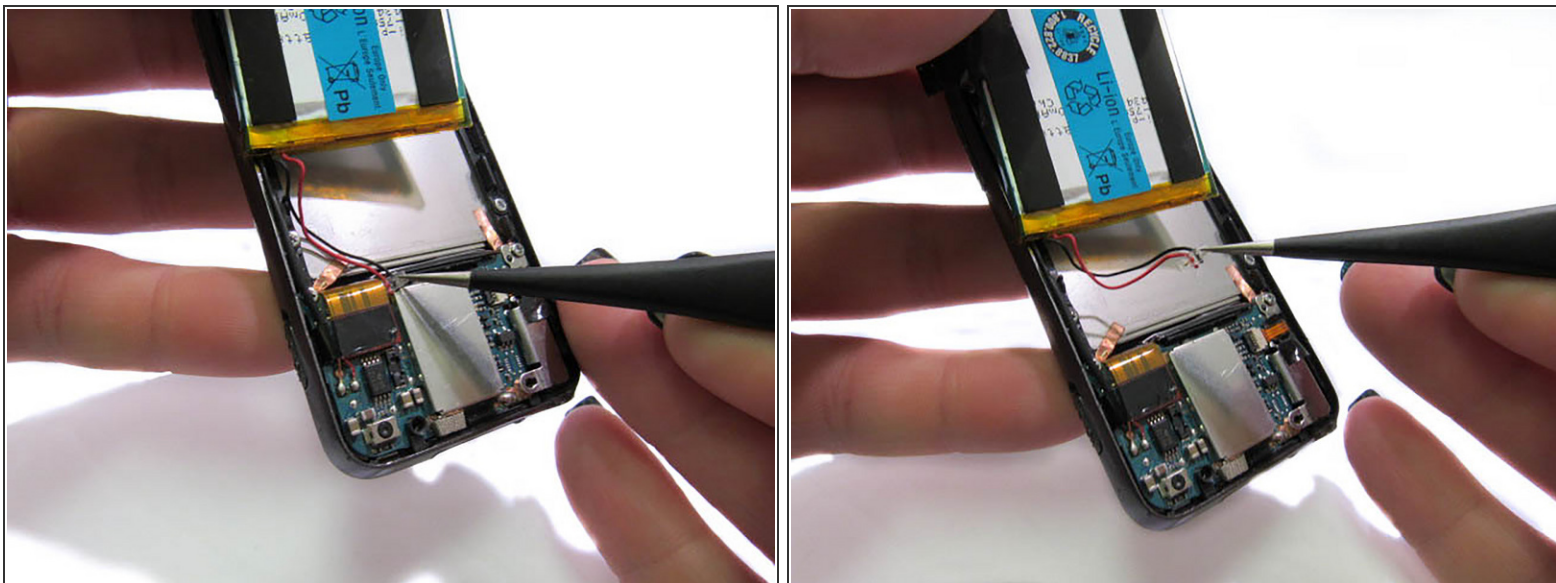

- Using pointed precision tweezers, unplug the wires connecting the battery and chip from the chip.

Step 8



- Remove battery.

To reassemble your device, follow these instructions in reverse order.

